

bfom Resin Panel Adhesive Installation Guide

1. Prepare the following tools

Structural adhesive, strong foam double-sided tape, hand edge trimmer, rubber mallet, hand saw, cleaning brush.




2. Clean dust from the timber substrate. The substrate must be flat and level; otherwise, the joint may have a height difference.

3. Remove the protective film from the back (white side) of the resin panel and

wipe it clean with a clean cloth. Apply foam double-sided tape and then structural

adhesive as shown. Apply foam tape at joints and in the middle parts for temporary fixing.

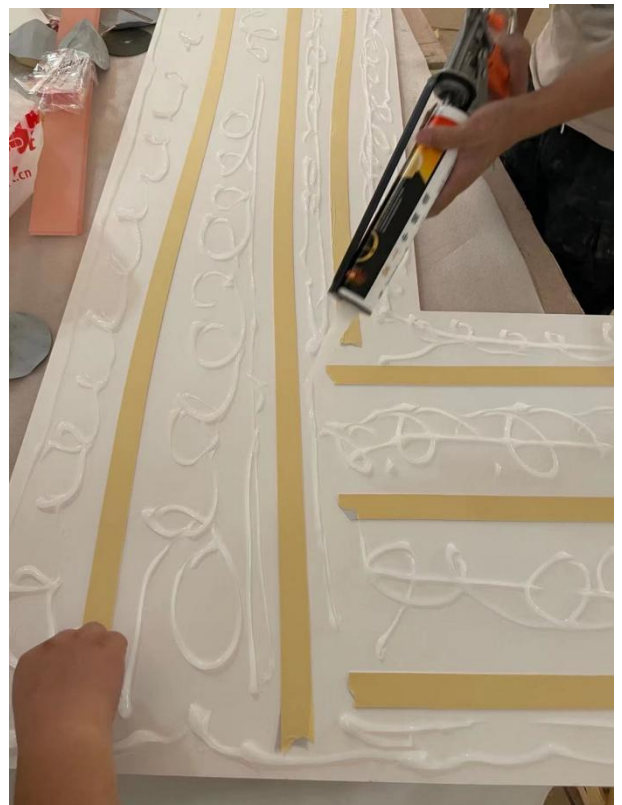

bfom Resin Panel Adhesive Installation Guide

4. At a joint, chamfer the joining face to R3 (Figure 1). Adjust the R radius with a hand edge trimmer according to the actual panel thickness.

5. Place the resin panel on the wall and gently tap it with a rubber mallet.

Note: Panels must be stored flat. Do not store them at an angle or on edge; otherwise, the panels may become deformed. (Figure 2)

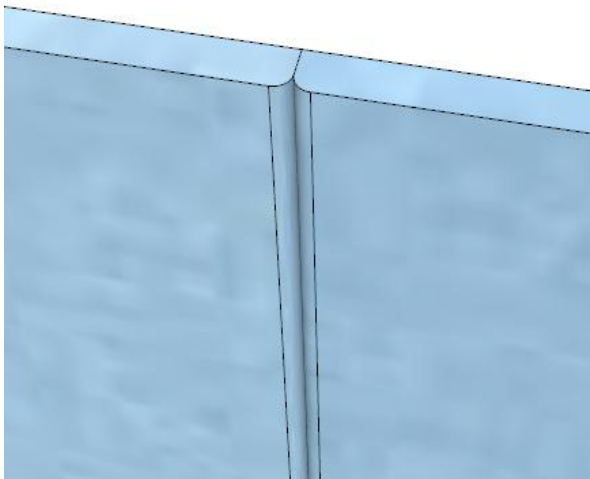


Figure 1

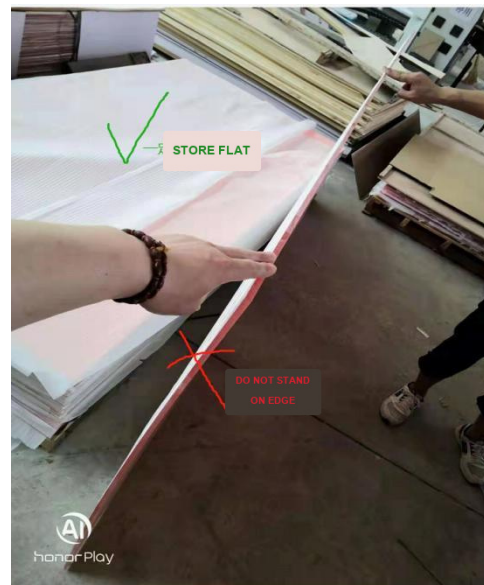


Figure 2